



M686F₂ (Trunk Release) the central control door lock timer choice

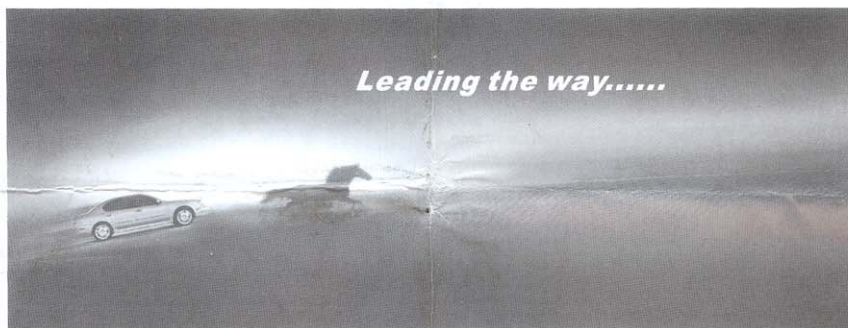

Operation Instruction:

- 1.Lock
Press "a" on the remote controller once with the direction light flash once, and then the central control door lock will be locked.
- 2.Unlock
Press "a" on the remote controller once with the direction light flash twice, and then the central control door lock will be unlocked.
- 3.Trunk release
Long press "a" for 2.5 seconds, the direction light will flash three and trunk release simultaneously.
- 4.Make a choice for timing the central control door lock (electric lock/pneumatic lock) The small thin conducting wire on the outer covering of the main unit lead outside (arc), cut off the wire to set as 4 seconds for pneumatic lock. In fact, all was set as 0.5 seconds for electric lock while leaving factory.

Circuit Diagram of Remote Central -Control-Lock System

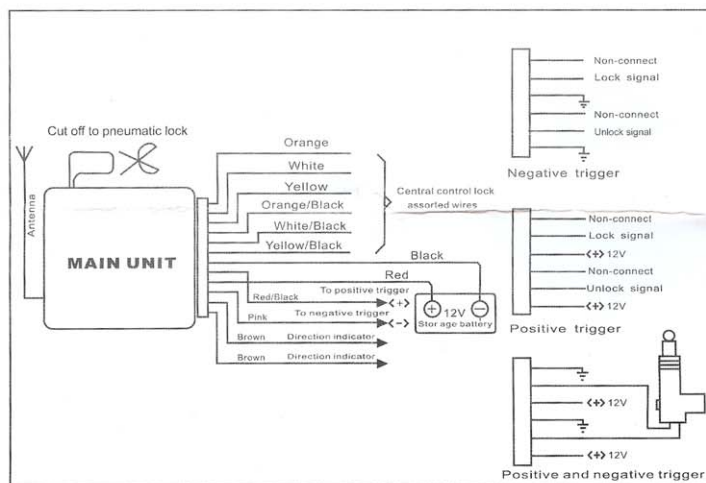

無料で見える! DVDカーナビBOOK
 2007年10月30日初版発行 | 編集 | 発行 | 印刷
 発行所 | 株式会社エヌエス | 〒100-0022 東京都千代田区千代田1-15-14号 東武ビル | 電話 | 03-5560-9976 (編集部) 03-5560-6073 (広告部) 03-5560-0064 (総務部)