


AUTO ANTENNA

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

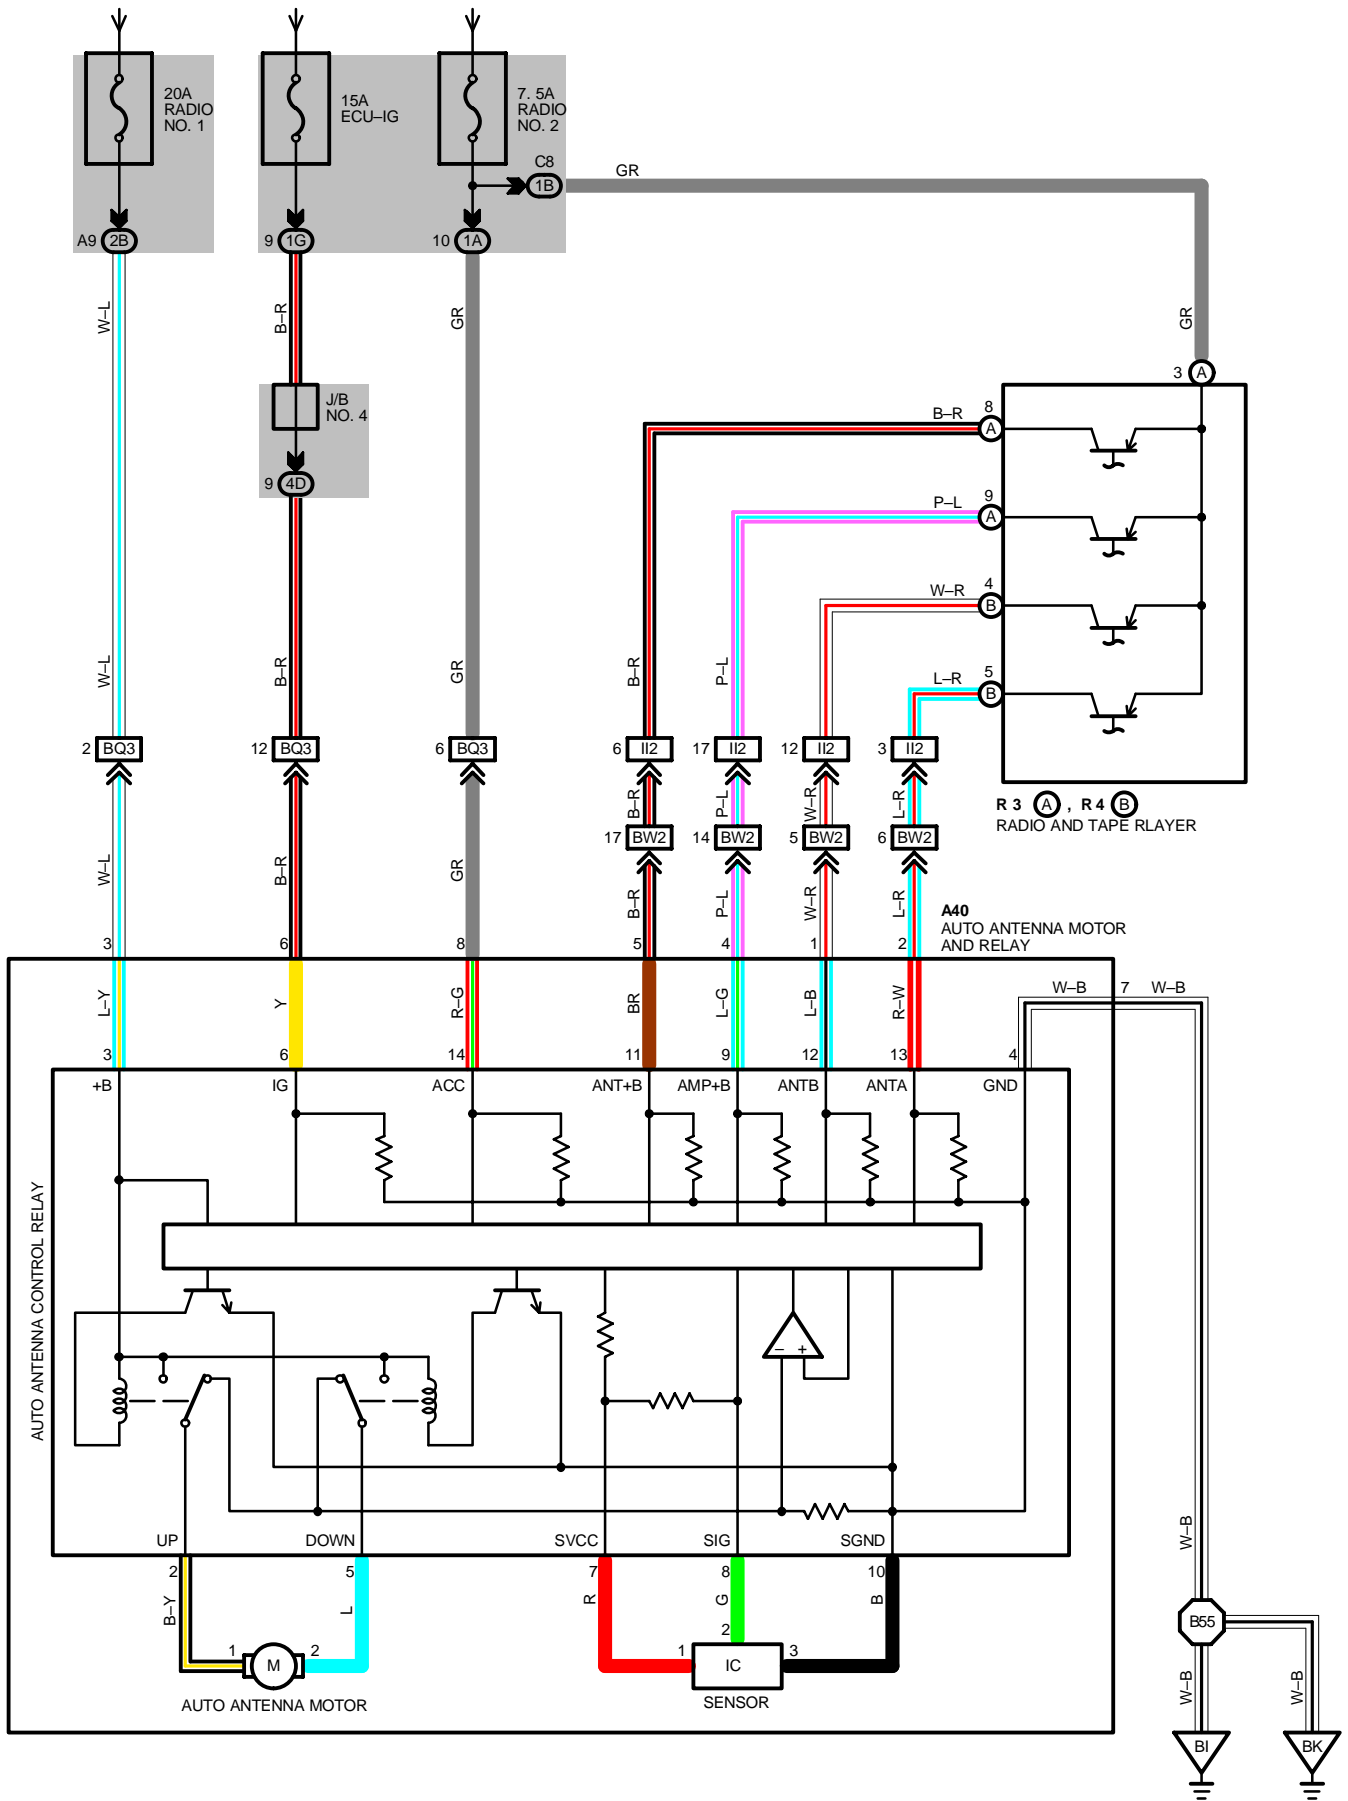

SERVICE HINTS

A40 AUTO ANTENNA MOTOR AND RELAY

3-GROUND : ALWAYS APPROX. 12 VOLTS

6-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ON** POSITION

8-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC OR ON** POSITION

7-GROUND : ALWAYS CONTINUITY

R 3 (A) RADIO AND TAPE PLAYER

(A) 3-GROUND : APPROX. 12 VOLTS WITH IGNITION SW AT **ACC OR ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
A40	30	R 3	A 29	R 4	B 29

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
1A	20	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1B	20	INSTRUMENT PANEL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
1G	20	COWL WIRE AND J/B NO.1 (LEFT SIDE OF STEERING COLUMN TUBE)
2B	22	COWL WIRE AND J/B NO.2 (ENGINE COMPARTMENT LEFT)
4D	25	COWL WIRE AND J/B NO.4 (BEHIND THE COMBINATION METER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
II2	36	INSTRUMENT PANEL WIRE AND FLOOR NO.1 WIRE (UNDER THE INSTRUMENT PANEL BRACE RH)
BQ3	40	COWL WIRE AND FLOOR NO.2 WIRE (LEFT KICK PANEL)
BW2	40	FLOOR NO.1 WIRE AND FLOOR NO.2 WIRE (UNDER THE LEFT SIDE OF REAR SEAT CUSHION)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
BI	40	UNDER THE LEFT REAR PILLAR
BK	40	BACK PANEL RIGHT


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
B 55	40	FLOOR NO.2 WIRE			

A40



R 3 (A)

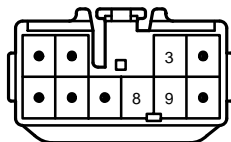

R 4 (B) BLUE

